

## Setting Up NDS/5008 serial server

Written by Greg King  
Friday, 12 October 2012 17:44

---

**DISCLAIMER!** This document is nothing more than the musings of the author as he attempts to perform the stated tasks. Conclusions and approaches may very well be incorrect, inefficient, or otherwise outside of professionally accepted best practices. Use this document at your own risk! In this document, screen outputs will be presented in **green**. Where keyboard input is required, the prompt will be in bolded red. **#** means you should be at the super user prompt, **\$** means you should be at an unprivileged user prompt. Do not include these prompts in your input! The command to be typed will be shown in **blue**.

**# ls -al**

means you type ls -al at the super user prompt.

This has been difficult.

The installation software seems to be for win2000 or winxp so I reloaded one of my boxes to xp to see if that would work.